 


# 7 DAY WIRELESS FORECASTER

# **WEATHERFX**

FOR GOLF

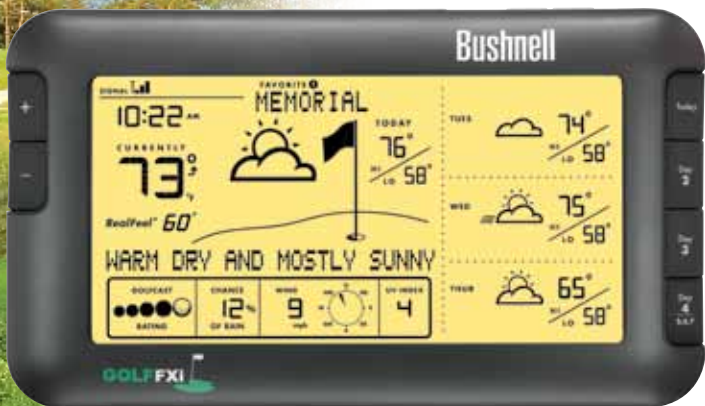


## Quick Start Guide

# Bushnell®

MODEL# 960071C  
Lit #: 98-1429/04-09

## Step 1: Install the Software

Insert the CD, click the “Golf FXi Setup Wizard” button and follow the on-screen directions to install the Golf FXi software on your PC (*Windows 2000 or later, with an “always on” internet connection*).

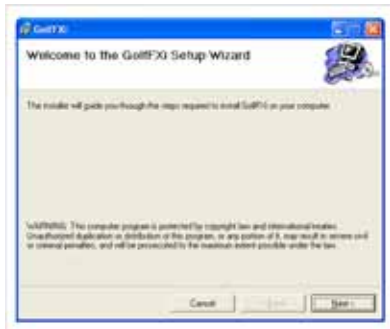


## Step 2: Connect the Transmitter

 
Connect the USB Transmitter to your PC's USB port.



## Step 3: Start the Golf FXi Application, Set Locations and Units


Double click the "Golf FXi" icon  on your desktop. When the application opens, move your cursor to the top (left) box, then click the orange "Edit Location" box when it appears (3a). Set your home course by selecting from the three drop down lists, then click "Save" to store (3b). Follow the same process to set up any or all of the remaining four location boxes for other courses. Next, click the "Settings" button and set your preferences for temperature, wind speed units and time format, then click "Save" (3c). In the main Golf FXi application window, you can click on any of the other "courses" you set up to see the forecasts for that location.

3a

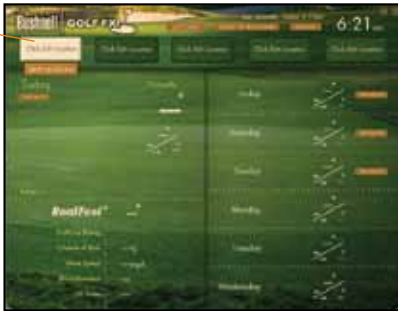


## Step 4: Set-up the Receiver Unit (LCD Display)

Insert 4x AA batteries into the Receiver, or connect its supplied AC adapter. The Receiver's display initializes and reads "Searching for PC" (press the SEARCH button on the back of the unit if this does not appear). Attach the easel stand to the Receiver and place it near your PC so you can see its display while you complete the setup.

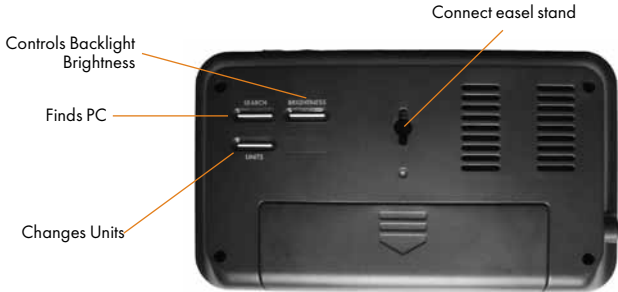


Toggle between your 5 stored golf course locations

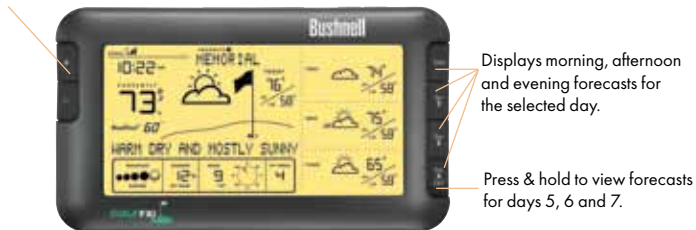

## Step 5: Transmit Weather Data from the PC to the Receiver

Click "Send to Receiver" on the Golf FXi program window (5a). The red LED on the USB Transmitter will glow, then blink while data is transferred from the PC software to the Receiver. The Receiver will indicate "PC FOUND-PLS WAIT 5 MINS." When the Transmitter's light stops flashing, the receiver's display should match the weather data shown on the PC. Use the +/- buttons to change locations on the receiver.

Keep the Golf FXi application running in the background and your PC powered on and connected to the Internet so the Receiver can provide you with the latest up-to-date forecast information.

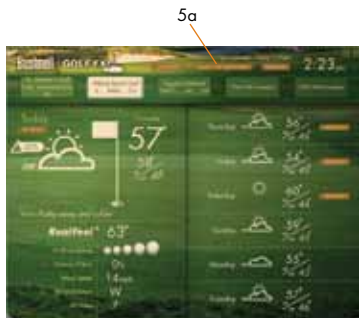

### BACKLIGHT COLOR REFERENCE : Temperature Range




Cold 30s 40s 50s 60s 70s 80s Hot

# Button/Controls Reference

Button Location	Name	Function
Back of Unit	SEARCH	Initiates search for PC – puts receiver on standby to receive data from USB transmitter
Back of Unit	UNITS	Press (repeatedly) to select hour format, wind speed and temperature units (use +/- to change setting)
Back of Unit	BRIGHTNESS	Press to select backlight brightness level (High, Low or Off)
Top of USB Transmitter	TRANSMIT	Equivalent to clicking “Send to Receiver” in Golf FXi software window
Front of Unit	+ and -	Press to scroll through Favorite Locations and to increment/decrement various settings
Top of Unit	SNOOZE/BACKLIGHT	Press to turn backlight on for 10 seconds or snooze alarm (alarm resounds after 9 minutes)
Top of Unit	ALARM	Turns alarm on/off
Top of Unit	AL SET	Press to set the alarm time (use +/- to change setting)
Front of Unit	Today, Day 2, etc.	Displays morning, afternoon and evening forecasts for the selected day. Press & hold “Day 4” to view forecast for Days 5, 6 and 7

# Forecast Icons Reference

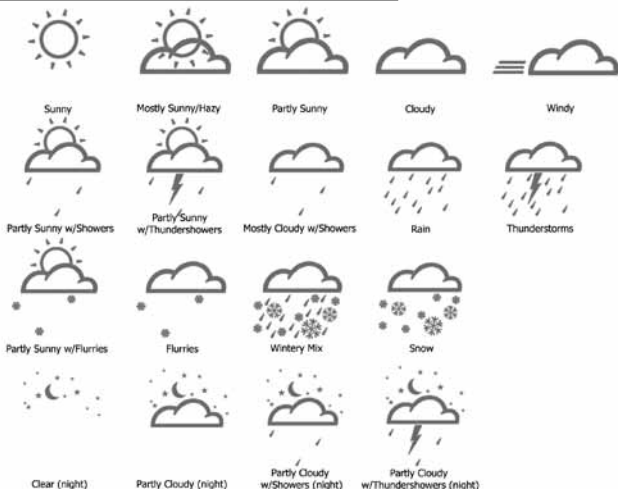

\*Windy icon (strips) will appear when wind speed is greater than 9 mph, and may be combined with any other forecast icon.

## ONE-YEAR LIMITED WARRANTY

Your Bushnell Golf FXi is warranted to be free of defects in materials and workmanship for one year after the date of purchase. In the event of a defect under this warranty, we will, at our option, repair or replace the product, provided that you return the product with return postage prepaid. This warranty does not cover damages caused by misuse, improper handling, installation, or maintenance provided by someone other than a Bushnell Authorized Service Department.

Any return made under this warranty must be accompanied by the items listed below:

- 1) A check/money order in the amount of \$10.00 to cover the cost of return postage and handling
- 2) Name and address for product return
- 3) An explanation of the defect
- 4) Proof of Date Purchased
- 5) Product should be well packed in a sturdy outside shipping carton, to prevent damage in transit, with return postage prepaid to the address listed below:

IN U.S.A. Send To:

Bushnell Outdoor Products

Attn.: Repairs

8500 Marshall Drive

Lenexa, Kansas 66214

## FCC COMPLIANCE INFORMATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protections against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with these instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**Note:** If harmful interference to radio or television reception should occur, determined by turning the product off and on, the user is encouraged to correct interference by trying one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect product to an outlet on a circuit different from receiver.
- Consult an experienced radio/TV technician for help.



For further questions or additional information please contact:

Bushnell Outdoor Products  
9200 Cody, Overland Park, Kansas 66214  
(800) 423-3537 • [www.bushnell.com](http://www.bushnell.com)

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER AUTHORITY TO OPERATE THE EQUIPMENT.

©2009 Bushnell Outdoor Products