

# Bushnell®

## GOLF



# WINGMAN<sup>HD</sup>

COLOR TOUCHSCREEN + GOLF GPS & SPEAKER



Scan to download the  
Bushnell Golf Mobile App  
to your phone.

Android and Google Play are registered trademarks of Google Inc. in the United States and other countries. iPhone and Apple Store are trademarks of Apple Inc., registered in the U.S. and other countries. Other names may be trademarks of their respective owners.

Click on each topic in the Table of Contents to go directly to it.

## **TABLE OF CONTENTS**

PARTS GUIDE	3
CONNECTING TO BUSHNELL GOLF MOBILE APP	4
CONNECT WINGMAN HD TO YOUR PHONE	4
POWER UP & BLUETOOTH™ SPEAKER OPERATION	4
TWS CONNECTION (STEREO) OPERATION	5
INDOOR/OUTDOOR EQ MODE	5
PLAY GOLF MODE - USING THE GPS RANGEFINDER	5
HOME SCREEN DISPLAY	5
PLAY GOLF MODE BUTTON OPERATION	6
BUSHNELL GOLF MOBILE APP FUNCTIONS	6
DYNAMIC FUNCTION	6
SETTINGS	7
SOUND BITES	7
PLAY NOW - ROUND SETUP	8
FIRST TEE INTRODUCTION	8
FIRST TEE INTRODUCTION & CUSTOM SOUND BITES IN ROUND	9
BITE MAGNETIC MOUNT	9
CLEANING AND GENERAL CARE	9
TROUBLESHOOTING	10
HAZARD GLOSSARY	10
TECHNICAL SPECIFICATIONS	10

## **LANGUAGES**

FRANÇAIS	12
ESPAÑOL	21
DEUTSCH	30
ITALIANO	39
中国人	48
日本語	57
한국어	66
BAHASA INDONESIA	75
SVENSKA	84
DANSK	93
PORTUGUÊS	102

## INTRODUCTION

Congratulations on purchasing the Bushnell Wingman HD, a high-quality surround sound speaker and large color display designed to both entertain and inform the golfer. When paired with the Bushnell Golf Mobile App, the Wingman HD delivers visible and audible GPS distances along with powerful, immersive audio and a large color screen—helping you stay connected to your game while enjoying your favorite music on the course.

This Owner's Guide is designed to help you get the most from your Wingman HD by explaining its key features, benefits, and proper care. We encourage you to review these instructions before your first round so you can maximize performance, extend product life, and fully enjoy the experience of having Bushnell innovation by your side.



## IN THE BOX:

1. Wingman HD Speaker
2. Cleaning Cloth
3. Lanyard
4. Carabiner
5. USB-C to A Cable

Charging Port  
USB-C to A



Lanyard/Carabiner  
Connection

BITE Magnet



## CONNECTING YOUR WINGMAN HD TO YOUR MOBILE DEVICE & BUSHNELL GOLF MOBILE APP

To connect your Wingman HD to your phone and the Bushnell Golf Mobile app:

- Download the Bushnell Golf mobile app at [app.bushnellgolf.com/install](http://app.bushnellgolf.com/install) or scan the QR code.
- If you are new to the app, you will be asked to set up a device after registration and select Wingman HD. As a returning user to the app, select "See All" from "My Devices", click "Add Device", and select Wingman HD from the list of Bushnell Golf devices.
- Follow the app's on-screen instructions to pair and connect your Wingman HD speaker.



*Note: After pairing, the Bluetooth on/off state will be the last set state once powered up.*

## POWER UP & BLUETOOTH™ SPEAKER OPERATION

1. Connect the provided USB-C charger to the USB-C input port at the bottom to charge Wingman HD's internal lithium-ion battery.
2. To see the battery's charge, see the top right of the screen. A red battery bar on the screen indicates low power.
3. The USB-A input/output port can recharge your phone or other accessories. *Note: Using the Wingman HD to recharge mobile devices will reduce the speaker's battery level and operating time.*
4. To turn the speaker on, press and hold the "B" button for at least 4 seconds, until the startup sound is heard and the screen appears, and release.
5. To pair the device with a mobile phone, ensure the Wingman HD is within 10 meters/32 feet from your device. Then, register and pair the device with the Bushnell Golf Mobile App for complete functionality of the Wingman HD. Refer to the "Connecting Your Wingman HD to Your Mobile Device and the Bushnell Golf Mobile App" instructions above.
6. To connect to Bluetooth, press the "B" button twice to enter pairing mode. The Bluetooth icon will appear on the screen. Go to the Bluetooth settings in your device and select "Wingman HD Audio" to pair. Follow the prompts to continue to connect to Bluetooth.
7. The Wingman HD has a microphone that allows you to take incoming calls. To answer an incoming call, press the Play button. To reject an incoming call, Press and hold the Play button. To end a call, press Play.


*Note: when powered on, the speaker automatically reconnects to the last mobile device it was paired with. The speaker can memorize up to 8 paired devices and will shut off after 15 minutes in pairing mode if no devices have been paired. This is a power-saving feature.*



## CONCERT LINKS OPERATION

The Wingman HD's Concert Links technology enables you to play two Wingman HD speakers with the same audio simultaneously. To activate Concert Links and listen to audio with mutiple Wingman HD units:

1. Place the two speakers near each other (the distance should not be over 10 meters/32 feet).
2. Power on both speakers. Press and hold the Play button on speaker for three seconds to enter into Concert Links Mode. Go through the same procedure for the second speaker.
3. Alternatively, Swipe Up on the FCB Home Screen. Press the Concert Links icon on one both speakers.
4. "Concert Links ON" will be displayed on the speakers if they are connected correctly.
5. To disconnect the Concert Links connection, press the Concert Links icon on the Utility screen or power off either speaker.

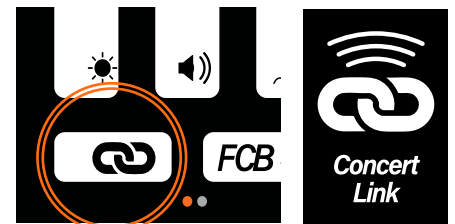

*Note: When two speakers are tethered in Concert Links mode and in a round of golf, the main speaker will be the only speaker to display information on the screen.*

## INDOOR/OUTDOOR EQ MODE



This electronically equalizes the speaker's tonal balance for optimum listening quality when used indoors (clubhouse/home) or outdoors (golf course). Indoor Mode provides a fuller, richer sound. Outdoor Mode carries sound further to be heard at a distance.

Simultaneously press the Volume Up and Volume Down buttons to toggle from Indoor/Outdoor Modes. Note: The Wingman HD default mode is Indoor.


HOME SCREEN NAVIGATION - IN GOLF MODE

Screen Brightness, Music Volume, & Voice Volume  
Concert Links & Short Cut back to Front/Center/Back Screen #1 or #2

Swipe  
Up, Down,  
Left, or Right  
to access  
screens.

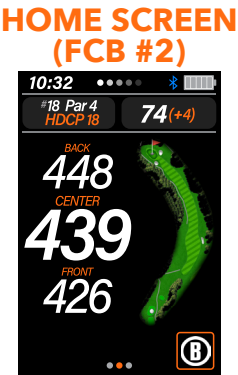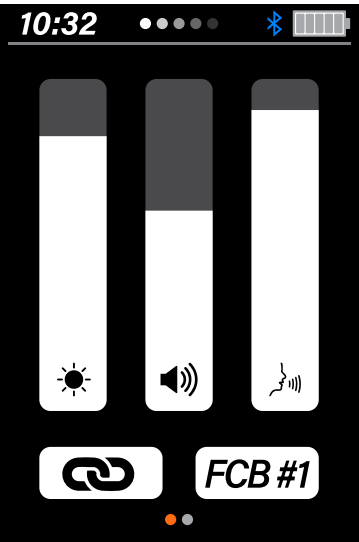

**Hazards**  
Scroll up to see more hazards. Six total per hole.

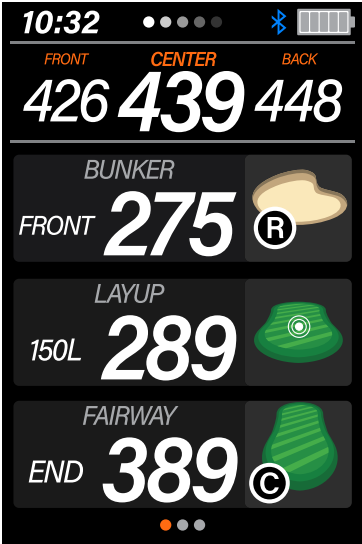


**Green View**  
Pin location can be moved in the Bushnell Golf App



\*If the Pin is moved in the App, "Center" will change to "Pin". This indicates the distance is now to the Pin and not the Center.

Hazard Icons

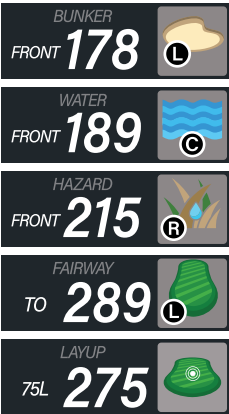

Shot Distance Screen



## START A ROUND OF GOLF


Need screenshots  
of these functions.

1. Turn on the Wingman HD by pressing and holding the "B" Button. Open the Bushell Golf Mobile App.
2. If the device has been paired to the Wingman HD "Connected" will be soon then, press "Play Golf".
3. Find your course, press to open a round. Follow the instructions on the app.
4. Once a game has started on the app, the Wingman HD will show the hole information and you're ready to PLAY GOLF!

## GAME PLAY ACTIONS

### ENTERING THE HOLE SCORE

1. To enter the score for the hole, press on the score on the top right of the Front/Center/Back or Hole View screens.
2. The Score screen allows the player to enter the score for the hole. If the score is less than three or more than eight, press on the three dots (...) and enter the score manually.

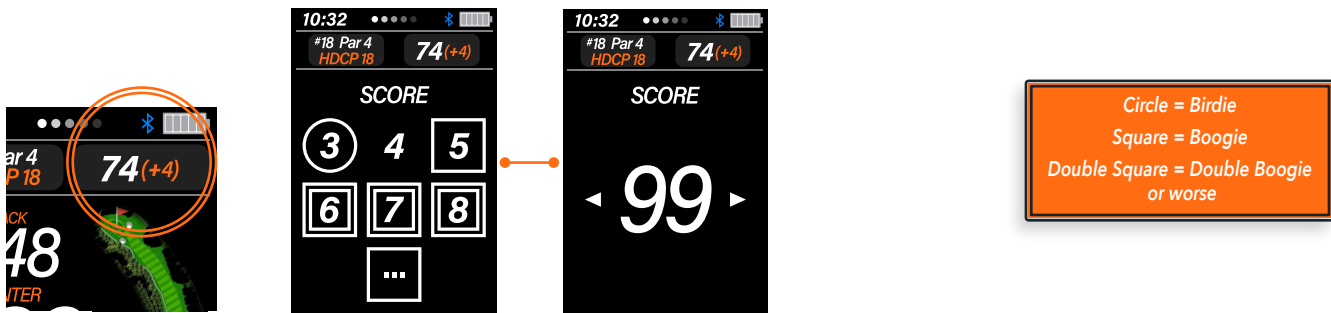


### USING THE SCORECARD

1. To access the Scorecard screen for the round, press on the score on the top left of the Front/Center/Back screen.
2. The Scorecard screen allows the player to enter or correct any scores for the game.



### SHOT DISTANCE

1. Swipe Up from the Front/Center/Back screen to access the Shot Distance screen.
2. Press the Play icon to start the Shot Distance calculation.
3. Drive or walk to the ball.
4. Press Pause to stop the Shot Distance calculation.
5. To reset, press the Reset icon.

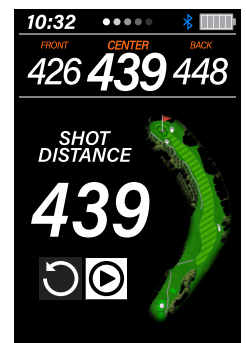

## USING MyBag TECHNOLOGY TO IMPROVE YOUR GAME

MyBag is a collaborative effort between Foresight Sports and Bushnell Golf, designed to generate real time personalized club and PlayAs recommendations based on current conditions at your location. The MyBag feature enables players to create and share personalized club assessment data across the Foresight Sports and Bushnell Golf environments, for use in the Bushnell Golf App. This technology represents a leap forward in distance measurement and personalized, data-driven performance enhancement for golfers of all levels.


To access the MyBag Screen on the Wingman HD, press the Center Distance on the FCB screen.

Wingman HD  
MyBag Screen

10:32		
FRONT	CENTER	BACK
210	220	235
CLUB	CARRY <sub>yds</sub>	
Dr	258	
3W	233	
5W	212	
4i	196	
5i	188	

### Create a MyBag Profile

1. To use MyBag technology, you will need a Bushnell Golf Mobile App account and a Foresight App account.
2. Create a MyBag club set using your account on the Foresight App. The app will take you through the setup process of hitting shots in the Foresight Sports environment to establish your personal MyBag club set.
3. Log in to your Bushnell Golf Mobile App, and from the Account screen, link your Foresight Sports account to import your MyBag club data.
4. Register your Wingman HD to your Bushnell Golf App from the homepage via Bluetooth and begin to receive personalized PlayAs distances and club recommendations.

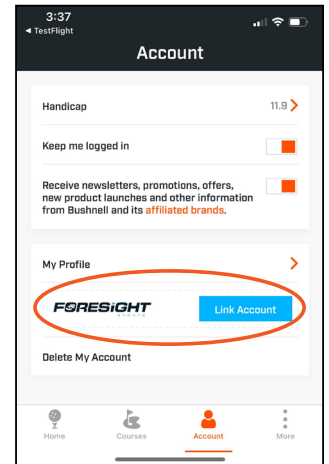


### MyBag Operational Tips

1. Once linked, your MyBag data will be automatically downloaded to your Bushnell Golf Mobile App account.
2. Each time the rangefinder connects to the Bushnell Golf Mobile App, the app checks if a new virtual bag of clubs and distances is available and updates if a new version is available.
3. The Bushnell Golf Mobile App will provide your club distances for current environmental conditions and display club dispersions overlaid on the hole view.

### MyBag Screen in the Bushnell Golf Mobile App

MyBag allows personalized club distances based on current conditions.

- Today's Distances - Your carry distances are adjusted for current conditions.
- Your club dispersions overlaid on the hole view.

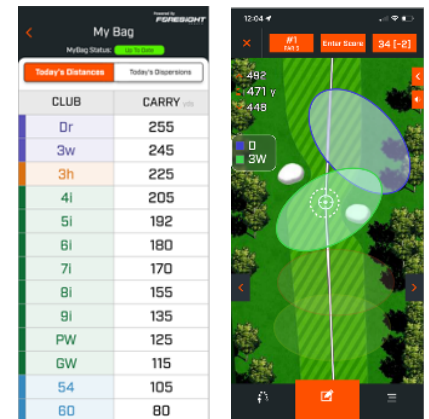

### MyBag Club Name Glossary

Woods		Hybrids		Irons		Wedges	
Club Name FSX to BG App	Club Identifier FSX Live to BG App	Club Name FSX to BG App	Club Identifier FSX Live to BG App	Club Name FSX to BG App	Club Identifier FSX Live to BG App	Club Name FSX to BG App	Club Identifier FSX Live to BG App
Dr	d1-d9	1h	1h	1i	1i	PW	P1-P9
2W	2F	2h	2h	2i	2i	GW	G1-G9
3W	3F	3h	3h	3i	3i	SW	S1-S9
4W	4F	4h	4h	4i	4i	LW	L1-L9
5W	5F	5h	5h	5i	5i	50	50°
6W	6F	6h	6h	6i	6i	52	52°
7W	7F	7h	7h	7i	7i	54	54°
8W	8F	8h	8h	8i	8i	56	56°
9W	9F	9h	9h	9i	9i	58	58°
11W	11F					60	60°
13W	13F					62	62°
						64	64°

### Foresight Mobile App




Scan the code  
to download the  
Foresight App and  
create an account and  
register your product.



# BUSHNELL GOLF MOBILE APP FUNCTIONS



## DEVICE FUNCTIONS

- **Unpair Device:** Press to unpair the device from the Bluetooth connection on your phone.
- **Settings:** See full explanation below.
- **Sound Bites:** See full explanation on page 8.
- **Concert Links Mode:** Concert Links can be toggled On/Off in the app or by double-clicking the speaker's Power button. See Page 4 for instructions.
- **Software Update:** Check for firmware updates for the speaker.
- **Support:**
  - Contact Bushnell Golf product support
  - About your speaker
  - Product user manual
  - Terms and Conditions
- **Remove Device:** This button lets you remove the device from the Bushnell Golf Mobile App account. You will also need to remove the device from your phone's list of available devices in the Bluetooth Settings.

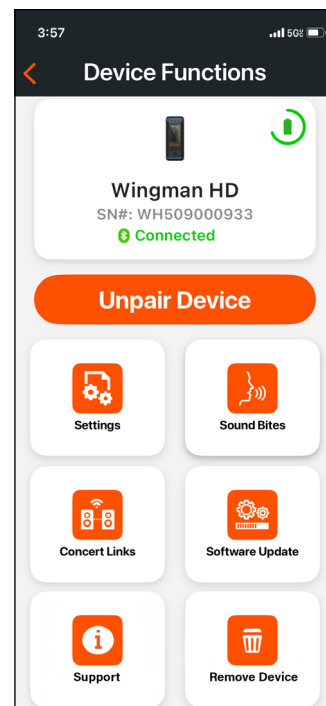

## SETTINGS



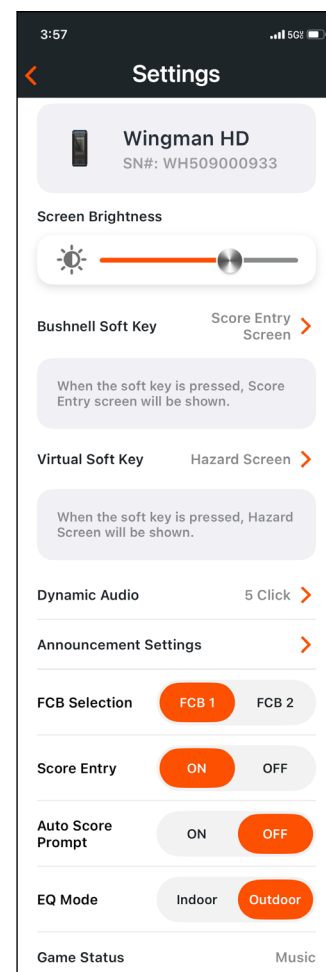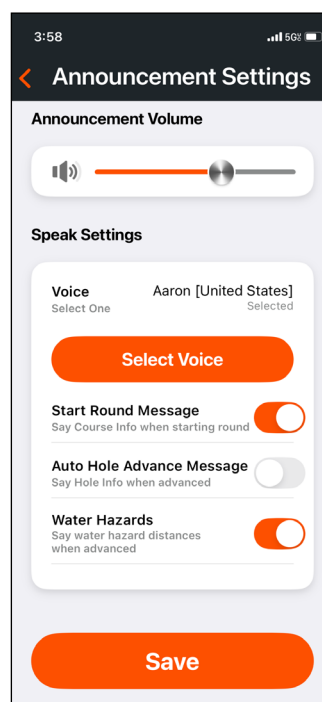

- **Screen Brightness:** Adjust the screen brightness to your preference.
- **Bushnell (B Button) Soft Key:** Choose the function you would like to program the B Button to perform. See instructions on page 10.
- **Virtual Soft Key:** Choose the function you would like to program the Virtual Soft Key to perform. See instructions on page 10.
- **Dynamic Audio:** Automatically adjusts volume when the cart is in motion. Choose from 1 click to 5 click.
- **Announcement Settings:**
  - A. Announcement Volume: Adjusts the volume for audible GPS distances, custom sound bites, and first introductions.
  - B. Speak Settings:
    - i. Select Voice for the character and language you wish to hear. The country next to the name of the character is associated with the language of the country.
    - ii. Start Round Message (On/Off): Announces course information when starting a round.
    - iii. Auto Hole Advance Message (On/Off): Announces hole information when the hole advances.
    - iv. Water Hazards (On/Off): Announces water hazard distances when the hole advances.
- **FCB Selection:** Choose between two views of the FCB Screen; with or without Hole View.
- **Score Entry:** Turn Score Entry On/Off
- **Auto Score Prompt:** Choose to have the Score Prompt reminder On or Off after a hole is completed.
- **EQ Mode:** Choose Indoor or Outdoor (see page 4 for more information)
- **Game Status:** Indicates the device is in Music or Golf Mode





## SOUND BITES

### A. Sound Bite List:

- Two default Sound Bites: Clap and Cheer
- Up to Ten custom Sound Bites
- Any Sound Bite can be added as a Favorite 1 , Favorite 2 , or both  .

For example, if five Sound Bites are selected as a Favorite 1, one of those five Sound Bites will be randomly selected to play when the Favorite 1 command is given from the ????

### B. Add Message



#### 1. Press Add Message to create Custom Sound Bite

#### 2. Voice:

- Press the red recording dot to record a five second Sound Bite
- Press the red recording dot again to end the recording
- Select Favorite One, Favorite Two or both. This will assign the button command that this Sound Bite will be associated with.
- Press "Custom #" in the title bar to rename the Sound Bite.
- Press Save.

#### 3. Text:

- Write text to be read as a Custom Sound Bite.
- Press "Custom #" in the title bar to rename the Sound Bite.
- Press Save.

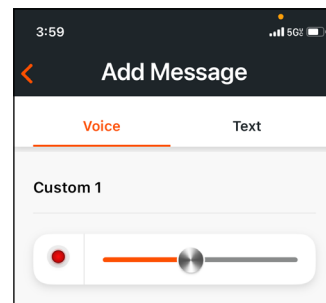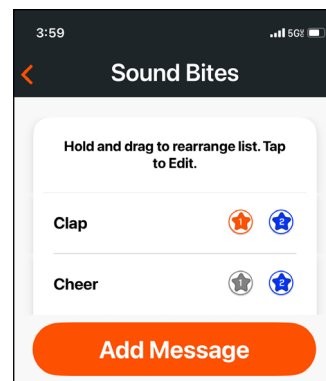



Need updated screenshot

## PLAY NOW - ROUND SETUP

Return to the Bushnell Golf Mobile App home page and select "Play Now" to Start Round.


Choose a course from a list of Recent, Nearby, or Open courses. If you are continuing a game, choose "Continue Round".

- **Round Name:** The round can be given a custom name. Click "Round #" and type what name you would prefer.
- **Date:** The current day is the default "date", but changing the date of the game can be done by clicking on the calendar icon.
- **Course Name:** Choose a course from a list of Recent, Nearby or Open courses.
- **Score Format:** Choose Stroke Play or Stableford.
- **Score Mode:** Choose Basic or Advanced.
- **GPS:** GPS must be enabled to view the hole layout.
- **Holes:** Choose Front 9, Full 18 or Back 9.
- **First Tee Introduction:** Default is Off. Turn On and add players' names. See instructions on page 10.
- **Starting Hole:** Choose the hole you are starting the round on.
- **Display Net Score:** On or Off.
- **Tee Box:** Tee Box information is available if net scoring is turned On.
- **Handicap:** Enter personal handicap.
- **Course Handicap**

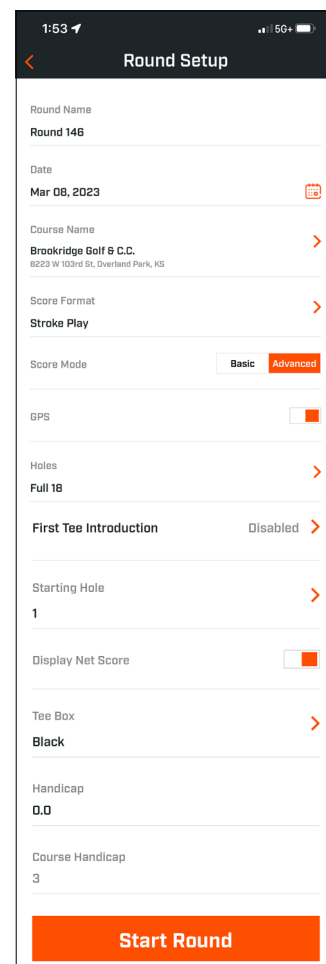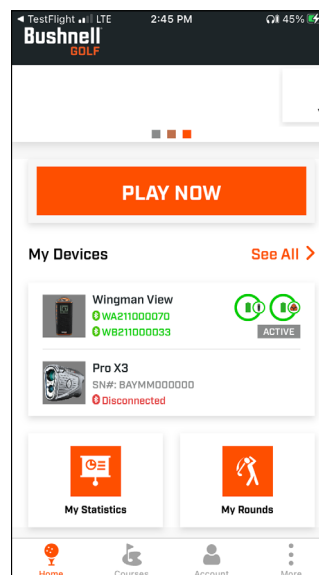


## FIRST TEE INTRODUCTION SETUP

1. Enable First Tee Introductions in Round Setup.
2. Press Add Golfer to add a new player.
3. Press Name to change a player's name.
4. Press Speaking icon on the right of the player's name to edit the crowd response for the player's introduction.
5. Press Start Round at bottom of screen to begin.

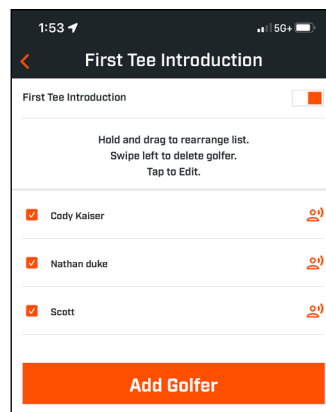


## FIRST TEE INTRODUCTION & CUSTOM SOUND BITES IN ROUND


1. Press the Speaker icon on the upper right of the screen to access Sound Bites and Introductions.
2. The Announcement Volume for Sound Bites and First Tee Introductions can be adjusted here.
3. Press on the Speaker icon to access Introductions. Click on Restart Introduction to reset the First Tee Introduction sequence.
4. Press the Speaking icon to change the Crowd Response for that player's First Tee Introduction.

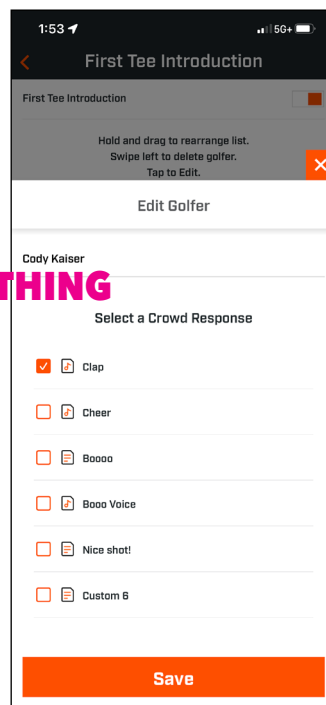

**NEED UPDATED APP SCREENSHOTS FOR EVERYTHING**

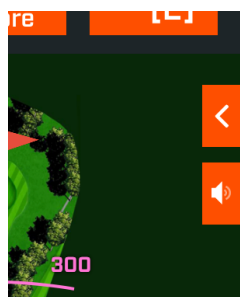



Speaker icon: access to Messages and First Tee Introductions

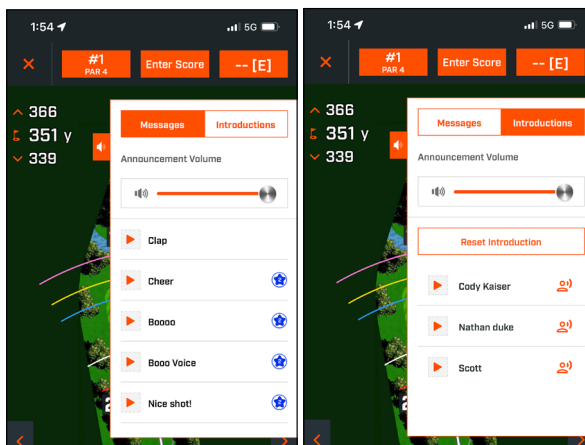

## PROGRAMMABLE WINGMAN HD BUTTONS

The Wingman HD has the capability of programming the "B" button and the "O" softkey. This is done by accessing Settings in the Bushnell Golf App.

- **Bushnell (B Button) Soft Key:** Choose what function you would like to program the B Button to perform: Golf Annoucements, Score Entry Screen, Scorecard View, Shot Distance Screen, or Hazard Screen. Press Set to save choice.
- **Virtual (O) Soft Key:** Choose what function you would like to program the B Button to perform: Golf Annoucements, Score Entry Screen, Scorecard View, Shot Distance Screen, or Hazard Screen. Press Set to save choice.

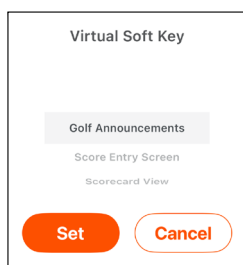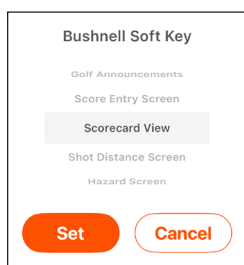

## PLAY BUTTON FUCTIONS


- 1 Click: Pause/Play music  
Answer/End phone call
- 2 Clicks: Next track/song
- 3 Clicks: Previous track/song
- Hold 3 Seconds: Enter Concert Links Mode



## CHARGING THE WINGMAN HD

Your Wingman HD is powered by built in lithium-ion, rechargeable battery and can be charged through any standard USB port (laptop computer) or with an AC adapter (not included).

1. Remove the rubber cover the USB-C charging port on the device.
2. Insert the small end (USB-C) of the provided charging cable into the device's charging port.
3. Plug the large end (USB-A) of the cable into a power source, such as a laptop/ computer USB port or an AC adapter (minimum 5V/2A).
4. Leave connected for 3-5 hours, or until the device is fully charged.
5. As device charges the ring indicator will flash.
6. When fully charged the entire ring will be solid green.

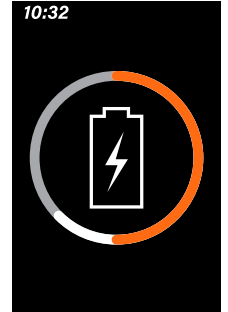

## BITE MAGNETIC MOUNT

The Wingman HD features a powerful BITE magnet incorporated into its housing, which allows the device to be securely attached to a golf cart bar or frame.

**⚠ WARNING: BITE FEATURE INCLUDED WITH DEVICE CONTAINS A NEODYMIUM MAGNET. MAGNETS COULD AFFECT THE FUNCTIONING OF PACEMAKERS AND IMPLANTED HEART DEFIBRILLATORS. IF YOU USE THESE DEVICES, KEEP SUFFICIENT DISTANCE FROM MAGNET. WARN OTHERS WHO WEAR THESE DEVICES FROM GETTING TOO CLOSE TO MAGNETS.**

- Magnet may lose part of its adhesive force permanently if exposed to temperatures above 175° F (80° C).
- Magnets produce far-reaching, strong magnetic field. They could damage TVs, laptops, computer hard drives, credit and ATM cards, data storage media, mechanical watches, hearing aids, and speakers. Keep the unit away from devices and objects that could be damaged by strong magnetic fields.
- Magnets have strong magnetic fields which can pinch skin and fingers. Use caution when attaching the unit to a metal bar.



## CLEANING AND GENERAL CARE

**IMPORTANT NOTE:** Remove all cable connections and close the port protection cover tightly after charging and before use to ensure the Wingman is water resistant.

Follow these tips for proper cleaning and maintenance:

- Blow away any excess dust or debris on exterior (or use a soft brush).
- To remove dirt or finger prints, clean with a micro-fiber cloth. The Wingman HD is water resistant, but should not be exposed to heavy rain or other direct streams of water, and will not withstand submersion in water or other liquids.
- When you are not using the speaker, please store it in a secure, dry indoor location for additional protection.

## TROUBLESHOOTING

Never disassemble your Wingman HD speaker. Irreparable damage can result from unauthorized service attempts, which also void the warranty.

If unit does not turn on:

- Press Power button fully.
- Charge internal battery. If unit does not respond to power button after fully charging, contact Bushnell Golf customer service: Bushnell Golf Customer Support Link or call (800) 423-3537.

If unit powers down during use:

- The battery charge level is low, indicated by a flashing orange Indicator Ring. Recharge the battery.

Problems pairing with phone via Bluetooth:

- The Speaker is within 10m from the device.
- The Speaker is in pairing mode, the LED indicator blinking orange.

No Sound:

- Make sure the music volume is at audible level on both your device and speaker.
- Make sure your device is successfully paired with the speaker.

Poor sound quality:

- Move the device closer to the Wingman HD or remove any obstacle between them.

Buttons do not function:

- If necessary, the Wingman HD can be reset. Make sure the charging cable is not connected. Place a small pin (<3mm) into the reset key (small opening to the right of the USB charging port) and hold it down (press lightly) for 2 seconds until the LED Indicator Ring turns off.

## FREQUENTLY ASKED QUESTIONS

How can the user keep the Wingman HD screen protected?

- The Wingman HD features a bright, high-quality display. Similar to a mobile phone, it can generate heat—especially in direct sunlight. For the best performance and longevity, try to keep the screen shaded whenever possible.
- If the Wingman HD does get too warm, you'll see an on-screen prompt reminding you to move it out of direct sunlight so it can cool down.



How should I charge my Wingman HD?

- Refer to the full charging instructions on [page 10](#). Use the included charging cable and connect it to a reliable USB power source.

What's the best way to charge the Wingman HD quickly?

- For faster charging, use a 5V/2A power adapter or a USB 3.0 port.

Can other chargers be used to charge the Wingman HD Speaker?

- Yes, most standard USB power sources will work, but charging times may vary depending on the output.

Can the Wingman HD Speaker charge other devices?

- Yes, the Wingman HD Speaker can charge other devices using USB-A input; however, this will reduce the battery charge on the Wingman HD.

## CAUTION:

- Keep the speaker and its accessories away from the reach of children, as they might cause a choking hazard.
- Keep the speaker away from fire, water, liquids, extreme heat and strong magnetic fields.
- Do NOT use this speaker at high volume for extended periods, as this may cause permanent hearing damage or loss.

## TECHNICAL SPECIFICATIONS

Dimensions	8.25" H x 3.5" W x 2.75" D
Weight	32oz/900g
Power Source	Internal rechargeable lithium-ion battery
Speaker	2 x 15 Watt Drivers
Waterproof Rating	IP67
Included Items	Speaker, USB charging cable, cleaning cloth, carabiner, & lanyard.
USB-C Input/Output	Bluetooth 5.2

- ⚠ WARNING: THIS PRODUCT USES A LITHIUM BASED BATTERY. LITHIUM BATTERIES CAN OVERHEAT AND CAUSE DAMAGE IF PHYSICALLY ABUSED. DO NOT USE BATTERIES THAT ARE DAMAGED OR SHOW SIGNS OF PHYSICAL WEAR.**
- ⚠ WARNING: FIRE HAZARD! DO NOT SHORT-CIRCUIT BATTERIES. BATTERIES MAY OVERHEAT OR EXPLODE.**
- ⚠ WARNING: DANGER TO LIFE. KEEP BATTERIES OUT OF THE REACH OF PETS AND CHILDREN. IF SWALLOWED, SEEK MEDICAL ADVICE IMMEDIATELY.**
- ⚠ WARNING: DO NOT EXPOSE BATTERIES TO WATER OR FIRE. DO NOT ATTEMPT TO CHARGE NON-RECHARGEABLE BATTERIES. THE BATTERIES MAY EXPLODE.**

### FCC Statement / CAN ICES-003(B)/NMB-003(B)

This device complies with FCC Part 15 rules and ICSED's license-exempt RSSs. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device does not contain any user-serviceable parts. Repairs should only be made by an authorized Bushnell repair center. Unauthorized repairs or modifications could result in permanent damage to the equipment, and will void warranty and your authority to operate the device under Part 15 regulations.

Specifications and design are subject to change without any notice or obligation on the part of the manufacturer.

### Rechargeable Battery Cautions:

- This product contains a rechargeable Lithium Poly battery. 3.6V 395mAh.
- This battery is not replaceable. Do not attempt to disassemble or modify this product.
- At end of product's life cycle, immediately recycle or dispose of used product according to local regulations and keep away from children. Do NOT dispose of this product or batteries in household trash. Do not incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Do not force discharge, recharge, disassemble, heat above 40° C (temp rating) or incinerate. Doing so may result in injury due to venting, leakage, or explosion resulting in chemical burns.
- Do not charge unit above 40° C or below 0° C.
- If product is to be stored for a long period of time, first charge the product to 80% capacity or higher. Then periodically recharge the unit every 6 months.
- Store product in cool, dry environment.

### Disposal of Electric and Electronic Equipment

*(Applicable in the EU and other European countries with separate collection systems)*

This equipment contains electric and/or electronic parts and must therefore not be disposed of as normal household waste. Instead, it should be disposed at the respective collection points for recycling provided by the communities. For you, this is free of charge.

If the equipment contains exchangeable (rechargeable) batteries, these too must be removed before and, if necessary, in turn be disposed of according to the relevant regulations (see also the respective comments in this unit's instructions). Further information about the subject is available at your community administration, your local waste collection company, or in the store where you purchased this equipment.

### FDA SAFETY

Complies with 21CFR1040.10 and 1040.11 except for conformance with IEC60825-1 Ed.3., as described in Laser Notice 56, dated May 8, 2019.

Caution: There are no user controls, adjustments or procedures. Performance of procedures other than those specified herein may result in access to invisible laser light.

- This product contains no user serviceable controls.
- This product must not be opened or modified by the consumer.
- This product must be returned to the manufacturer for service.

Device specifications and design are subject to change without notice or obligation on the part of the manufacturer.

### Radiation Exposure Statement:

This device complies with the portable RF exposure limit set forth for an uncontrolled environment and is safe for the intended operation as described in this manual. Further RF exposure reduction can be achieved if the product can be kept as far as possible from the user's body or if the device is set to a lower output power if such function is available.

Bluetooth: 2402MHz~2480MHz, MAX power is -0.58 dBm(EIRP)



FCC ID: 2ASQI-362350  
IC: 24886-362350



KCC ID: R-R-x6S-362350



219-259367



©2025 Bushnell Holdings, LLC  
Bushnell,™, ®, denote trademarks of Bushnell Holdings, LLC  
www.bushnellgolf.com  
9955 Black Mountain Rd., San Diego, CA 92126

<http://bushnellgolf.com/patents>