

Basic Operation and Feature Demonstration

- 1. Open Battery Cover and remove protective plastic disc from battery. Replace cover.
- 2. Press **Power/Fire** button to activate display and fire laser. Display remains active for 10 seconds.
- 3. Adjust **Eyepiece Diopter Dial**, rotating it until display appears sharp.
- 4. To demo Pinseeker/Visual JOLT feature, press & hold **Power/Fire** while moving the laser across trees, etc. in the background, then placing the Aiming Circle over the golf flag. JOLT Technology generates two short vibrations to confirm that the distance displayed is to the flag (closest object), and the Visual JOLT red indicator ring in the display illuminates.
- 5. Press & hold Mode button to enter Settings. Tap Mode button to cycle thru "Bright 1~Bright 4". Press Power/ Fire to select your preferred display brightness setting.
- Press Mode to cycle Yards/Meters distance units preference. This also previews the Jolt indications (vibration+display indicator ring). Press Power/Fire to confirm units preference and exit the Settings menu.
- 7. Slide **Slope Switch** to left (*red indicator visible*) to enable slope compensated ranging, slide it to the right (*red indicator hidden*) to disable slope.
- 8. With slope mode enabled, tap **Mode** button to toggle Elements on/off, indicated by the Elements mode icon in the display. With Elements mode is on, the Slope compensated distance also factors in the air pressure and temperature at your location. Note: once the Pro XE has shut off, it will always default back to the last mode used.

A powerful BITE magnet inside the Pro XE (right side), allows the unit to be securely attached to a golf cart bar or frame.